



GENERAL NOTE:

1. INSTALL INSTRUMENT AS PER MANUFACTURER RECOMMENDATION. INSTALL AFMS TRANSMITTER OUTSIDE AIR HANDLING UNIT.
2. DO NOT INSTALL AFMS TRANSMITTER INSIDE AHU IN AIR STREAM.
3. PRIOR TO ANY AFM INSTRUMENT INSTALLATION CONTACT AND MEET OWNER (UIUC COMMISSIONING INSPECTION GROUP).

1 AIR FLOW MONITORING STATION (AFMS) PLACEMENT DETAILS
NOT TO SCALE