



NOTE:

WHEN VFD RECEIVES A RUN COMMAND, WHETHER IN "HAND" OR "AUTO", THE VFD SHALL CLOSE CONTACTS ON THE VFD OUTPUT RELAY. ENERGIZING DAMPER MOTOR OR RELAY CONTROLLING DAMPER MOTOR. WHEN DAMPER END SWITCH CLOSSES, PROVING THE DAMPER OPEN, THE VFD WILL ALLOW MOTOR TO START.