


NOTES:

1. INSTALL FREEZESTAT CAPILLARY TUBE(S) ON UPSTREAM FACE OF EACH COIL. PROVIDE COMPLETE COVERAGE SUCH THAT CAPILLARY TUBE(S) ARE WITHIN 6'-0" OF EVERY POINT ON COIL FACE.
2. PROVIDE MULTIPLE FREEZESTATS AS REQUIRED FOR COMPLETE COVERAGE.
3. PITCH CAPILLARY TUBE(S) CONTINUALLY DOWNWARD WITHOUT SAGGING.
4. FOR PROTECTION OF CHILLED WATER COILS, PROVIDE TWO COMPLETE SETS OF FREEZE PROTECTION THERMOSTATS:
 - A. 35° F SETPOINT - MANUAL RESET.
 - B. 40° F SETPOINT - AUTOMATIC RESET.
5. COMB ANY BENT FINS AFTER INSTALLATION IS COMPLETE.

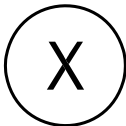

FREEZE PROTECTION THERMOSTAT INSTALLATION DETAIL

NOT TO SCALE

23 82 16-1

FREEZE PROTECTION THERMOSTAT INSTALLATION DETAIL

Date: April 8, 2010

Dwg. No.: 23 82 16-1