

4 Wire connections.

- A. Use supplied crimp connectors to terminate EPT wires.
 1. Yellow connectors for 12AWG connections.
 2. Violet connectors for 18AWG or smaller connections.

FRAME WIRE	EPT10 WIRE	DOOR WIRE
	Black	
	Brown	
	Red	
	Orange	
	Yellow	
	Green	
	Blue	
	Violet	
	Gray	
	White	

Fill in tables during installation.

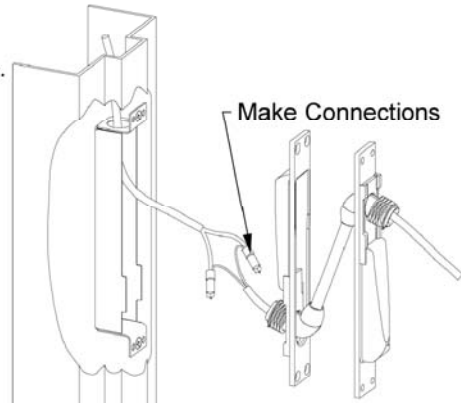


Figure 4. EPT Wire Terminations

5 Mount EPT assembly.

- A. Carefully tuck excess wire into backboxes as shown in Figure 5A.
- B. Fasten EPT assembly to frame using four #10 x 3/4" machine or wood screws.
- C. Repeat Steps 4 and 5 for door side.

1/2" CONDUIT FROM
INSIDE FRAME MOUNTED
BACK BOX OF EPT-10 TO
JUNCTION BOX

NOTE: Be careful not to pinch wires between Backbox and EPT.

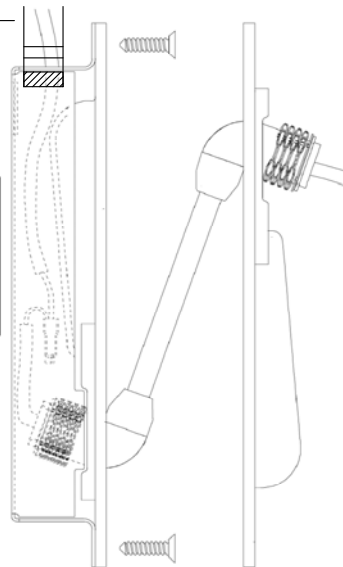


Figure 5A. Mount EPT assembly

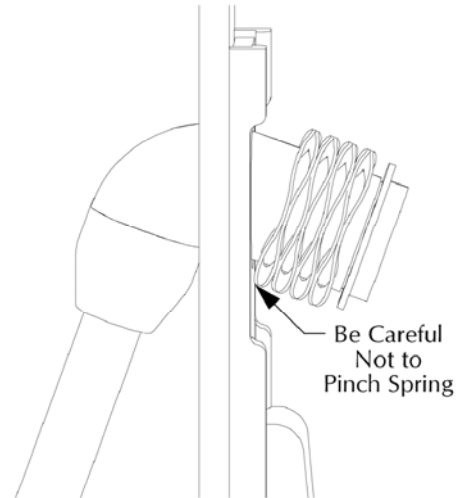


Figure 5B. Exploded view of spring

DRAWINGS TAKEN FROM [HTTP://WWW.VONDUPRIN.COM/](http://www.vonduprin.com/)



STANDARD VON DUPRIN EPT-10 INSTALLATION DETAIL 4

NOT TO SCALE

28 13 00 - 13